


Utility Universal Rear Basket

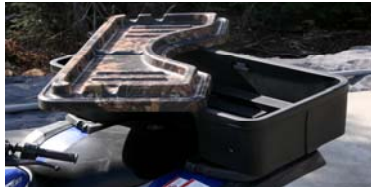

Assembly Instructions

1. Mount the 4 black plastic hooks to the Universal Rear Basket using either the rivets or screws included in the hardware kit. If you have a rivet gun available the rivet is the preferred mounting method, however if this is unavailable screwing the hooks to the basket is also sufficient. Refer to **Figure 1** and **Figure 3**
2. If using the rivets drill a 3/16" hole straight down from the holes in the basket lid approximately 4" from the bottom of the basket to the mounting hole. (**NOTE: Do Not Drill Through Second Wall**)
3. Then install the rivet using a pop rivet gun.
4. If using the screws to install the hook, put the screw through the hook and into the basket using an electric screwdriver/drill or drill a 1/8" pilot hole and install the screw using a Phillips screwdriver.
5. Once the hooks are installed make a knot in each piece of stretch cord, by doubling the rope then looping it through itself. Do this for each of the 4 pieces of cord. Refer to **Figure 2**
6. Then push the loop through the holes on the basket lid using the knot as the stop, allowing the cord to stretch and loop over the hook.

NOTE: The tension required to hold the lid on can be adjusted by altering the length of the loop.



Figure 1



Figure 2

Figure 3



Utility Universal Rear Basket Lid Seal



Before Assembly of Rear Basket Lid

1. Apply lid seal. Peel paper from seal and apply as shown in **Figure 1**



Figure 1